 


RAKET 95 VARAOSALUETTELO

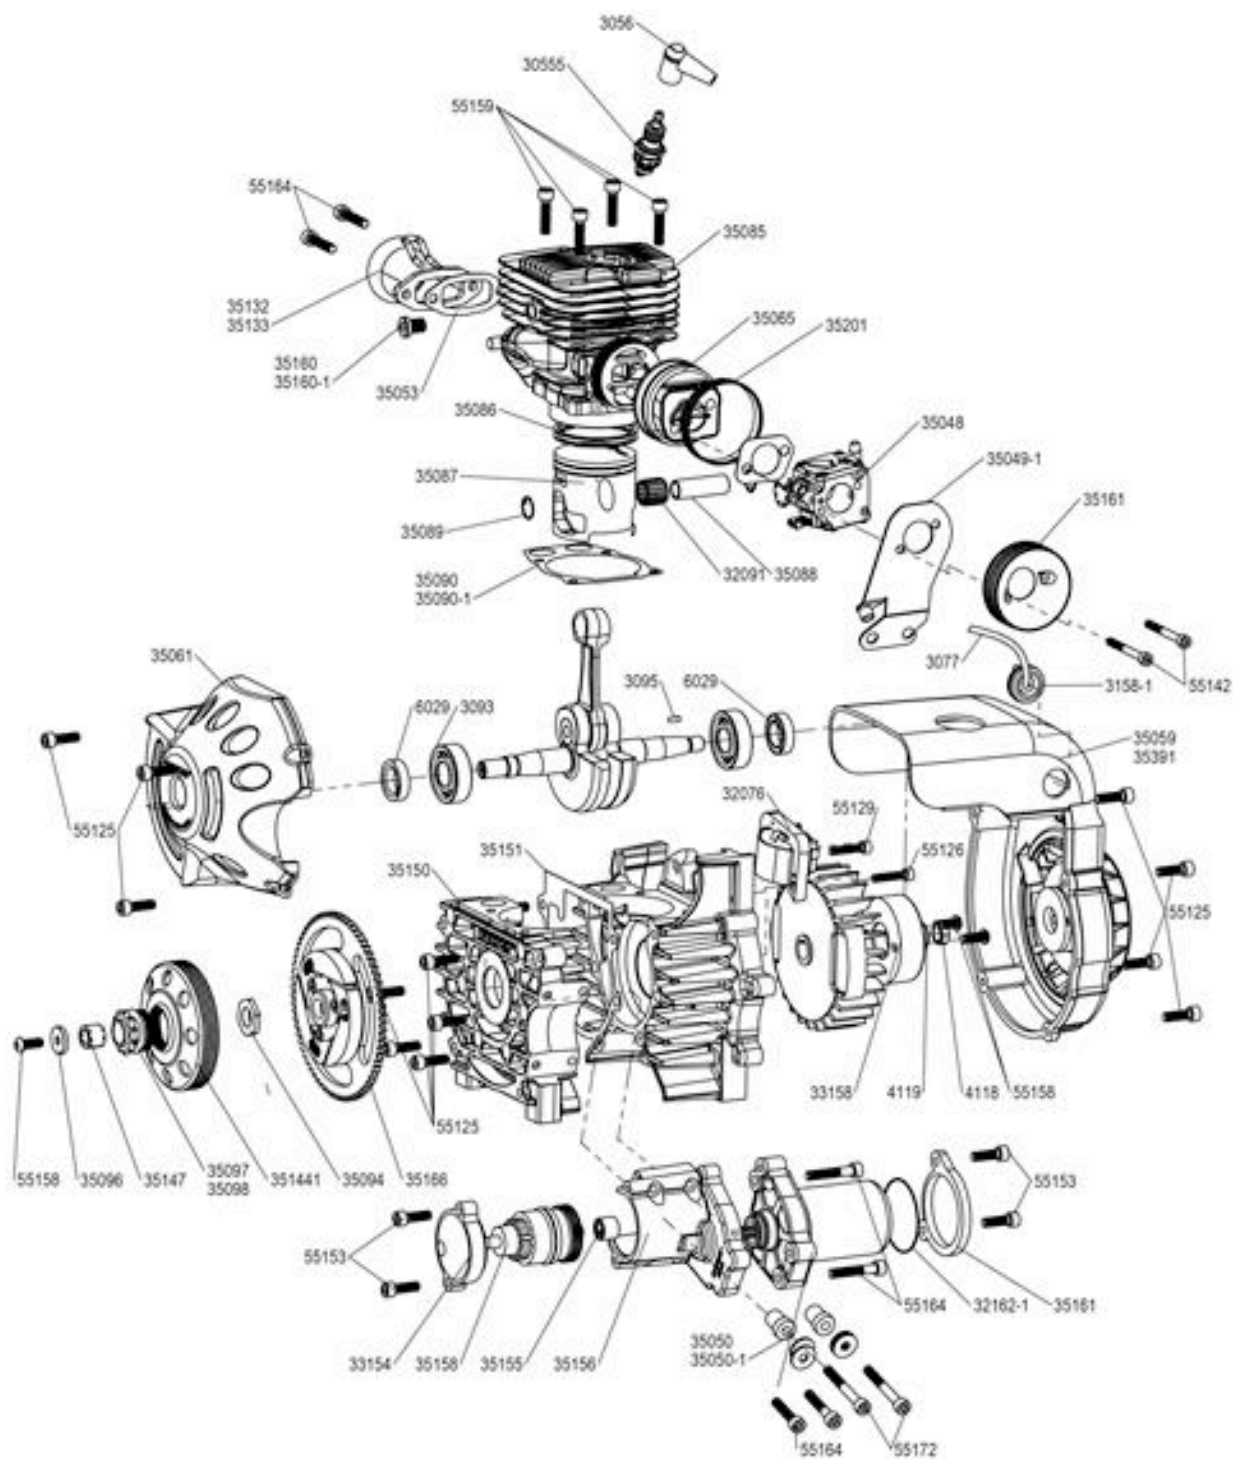

RAKET 95 VARAOSALUETTELO



[3012-9 Silencer R95, R120](#)



[30555 Sparkplug NGK BPM 8Y](#)



 
[3056 Spark plug cap](#)



[3077 Ignition cable](#)



[3093 Main bearing 6203](#)

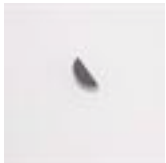


[3095 Key for fly wheel](#)



[3158-1 Bushing for ignition cable 120](#)



 [32076 Ignition system selettra 95, 120 el](#)

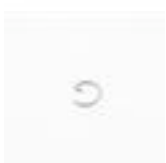

[32089 Circlip 120](#)



[32162-1 O-ring start engine support](#)



[33158 Flywheel hub 95, 120 ES](#)

RAKET 95 VARAOSALUETTELO



[350122 Inside tube, Raket 95 silencer](#)



[35048 Carburettor Tillotson HS319A](#)



[35049 Thottle cable support](#)



[35049-1 Throttle cable support complete, R95](#)



[35050 Spacer for cable support 19 mm](#)



[35050-1 Distans gasvirefäste 95 Micro 22 mm](#)



[35053 Exhaust gasket Raket 85, 95 & 120](#)



[35061 Sprocket guard Raket 95](#)



[35065 Inlet flange Raket 95](#)



[35078 Stoppsladd 95](#)



[35085 Cylinder R95 \(No piston\)](#)

RAKET 95 VARAOSALUETTELO



[35086](#) [Piston ring Raket 95](#)



[35087-1](#) [Piston complete Raket 95 10-](#)



[35090](#) [Cylinder gasket Raket 95](#)



[35090-1](#) [Cylinder gasket 0,25 Raket 95](#)



[35091](#) [Needle bearing R95, R120](#)



[35092](#) [Crank shaft complete Raket 95](#)



[35094](#) [Nut for clutch Raket 95](#)



[35096](#) [Washer clutch drum Raket 95](#)



[35097](#) [Engine Sprocket 11t. R95](#)



[35098](#) [Engine Sprocket 12t. R95](#)



[35132](#) [Manifold 95](#)

RAKET 95 VARAOSALUETTELO



[35133 Exhaust flange with restrictor](#)



[35144-1 Clutch drum Raket 95 11-](#)



[35144-2 Clutch drum R95 11t Cpl.](#)



[35144-3 Clutch drum R95 12t Cpl.](#)



[35147 Needle bearing for clutch Raket 95](#)



[35150 Crankcase, Raket 95](#)



[35151 Crank case gasket Raket 95](#)



[35152 Gasket set engine Raket 95](#)



[35155 Needle bearing start engine Raket 95](#)



[35156 Support for start engine Raket 95](#)



[35158 Bendix startmotor Raket 95](#)

RAKET 95 VARAOSALUETTELO



[35161 Carburettor flange R95](#)



[35166 Clutch/Start gear R95 Cpl. 12-](#)



[35201 Clamp Ring Inletflange](#)



[35510 Battery/startbox Raket complete](#)



[4118 Fly wheel nut, Raket M10 x 1. 60, 95, 120](#)



[4119 Washer flywheel nut 60, 95, 120](#)



[55125 Allen key screw 5 x 16](#)



[55153 Allen key screw 6x20](#)



[55158 Allen key screw 6 x 16](#)



[55159 Allen key screw 6x25](#)



[55164 Allen key screw 6 x 35](#)

RAKET 95 VARAOSALUETTELO



6029

Oil sealing teflon 17x28x7